




KAOKO™ CRUISE CONTROL KIT:

For Model **HONDA** Silverwing 600 (2009-)




Patents
 "U.S. Pat. No. US D593,462 S"
 "U.S. Pat. No. US D593,463 S"
 "U.S. Pat. No. US D593,464 S"

RSA Registered Designs
 No. A2007/00202 No. A2007/00205
 No. A2007/00203 No. A2007/00206
 No. A2007/00204 No. A2007/00207

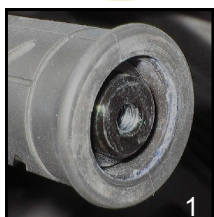

Bar Weight Removed

Thrust Washer
 inserted
 between
friction nut and end
 of
 Handle bar grip

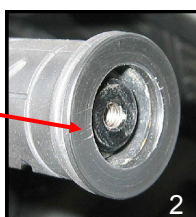

Thrust Washer Fitted



Assembled KAOKO™ Kit

KAOKO Kit
Comprises of :
 End Weight,
 Friction Nut,
 Thrust Washer,
 2mm Allen key,
 Fitting
 Instructions

DISCLAIMER: NO RESPONSIBILITY ACCEPTED FOR NON-ADHERENCE TO THESE INSTRUCTIONS

KAOKO™ Safety Warning:

See: www.kaoko.com for further information info@kaoko.com

The KAOKO™ Cruise Control is an aftermarket accessory. Any misunderstood, abused or incorrectly installed motorcycle accessory is a safety hazard that could cause injury or death. It's the rider's responsibility to understand the operation and purpose for which the KAOKO™ Cruise Control is designed, namely, for cruising, only when safe to do so. At all other times the control should be disengaged. The KAOKO™ Cruise Controls are to be used only by experienced and responsible riders.

Note: An adjustment to throttle assembly position may be necessary to suit KAOKO Cruise Controls. The throttle assembly position on aftermarket bars, and some OEM bars, is adjustable. The assembly can marginally be re-positioned along the handle bars slightly loosening the throttle assembly clamp screws, and then sliding the throttle assembly along the handle bars (left or right). Once done, firmly tighten the clamp screws to OEM torque specifications. This adjustment is generally not necessary.

Fitting & Operating Instructions :

Step 1: Completely remove the right hand side bar weight as shown in **picture 1**.

Step 2: Adjust the friction nut up against the shoulder of end weight. Place KAOKO™ thrust washer over the spigot of the KIT and between the friction nut and end of throttle and firmly fasten the central retaining screw as seen in **picture 3**.

Step 3: See under **Maintenance below** and set grub screw as described (2mm key) See **picture 3**.

Operation: The friction nut has a **left hand thread**. In readiness for engagement, it must be adjusted so that it makes light contact with the thrust washer. Note: The Thrust Washer must thrust against the internal plastic throttle sleeve; NOT the rubber throttle grip.

To Engage: While rolling on the throttle, the friction nut can be gripped between the small finger and palm of hand. This action tightens the nut and provides sufficient friction to set throttle to the desired opening.

(The friction is such that the rider may still open and close the throttle. It simply has a slight stiffness to it.)

To Disengage: While rolling off the throttle, grip friction nut between small finger and palm of hand.

VERY IMPORTANT!! The throttle should open and snap closed freely when correctly disengaged.

Note: The Grub Screw in the friction nut is set to provide the necessary resistance on thread of friction nut. This may be adjusted periodically to take up wear.(2mm Allen key)

Maintenance: Remove kit annually. Unscrew friction nut and brush clean threads with mild soap. Apply petroleum jelly to threads and assemble. Adjust grub screw to desired operating resistance. The nut should be slightly stiff turning.
 (O-Ring cushion: 19.6mm I.D. x 2.4mm section — if replacement is required)

Indemnity:

It is advised that the use of the cruise control is at the sole risk of the rider and by his/her decision to use it he/she does indemnify the manufacturers or organizers, their agents, employees and officers against any claim or action by themselves, their dependants or any other third party arising out of any loss, damage, injury or death suffered.